


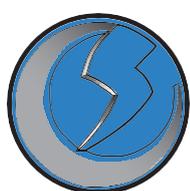

ecomobility
GREEN WORLD


Workshop Manual



EFUN

PUSA 45/90

Specific Operation

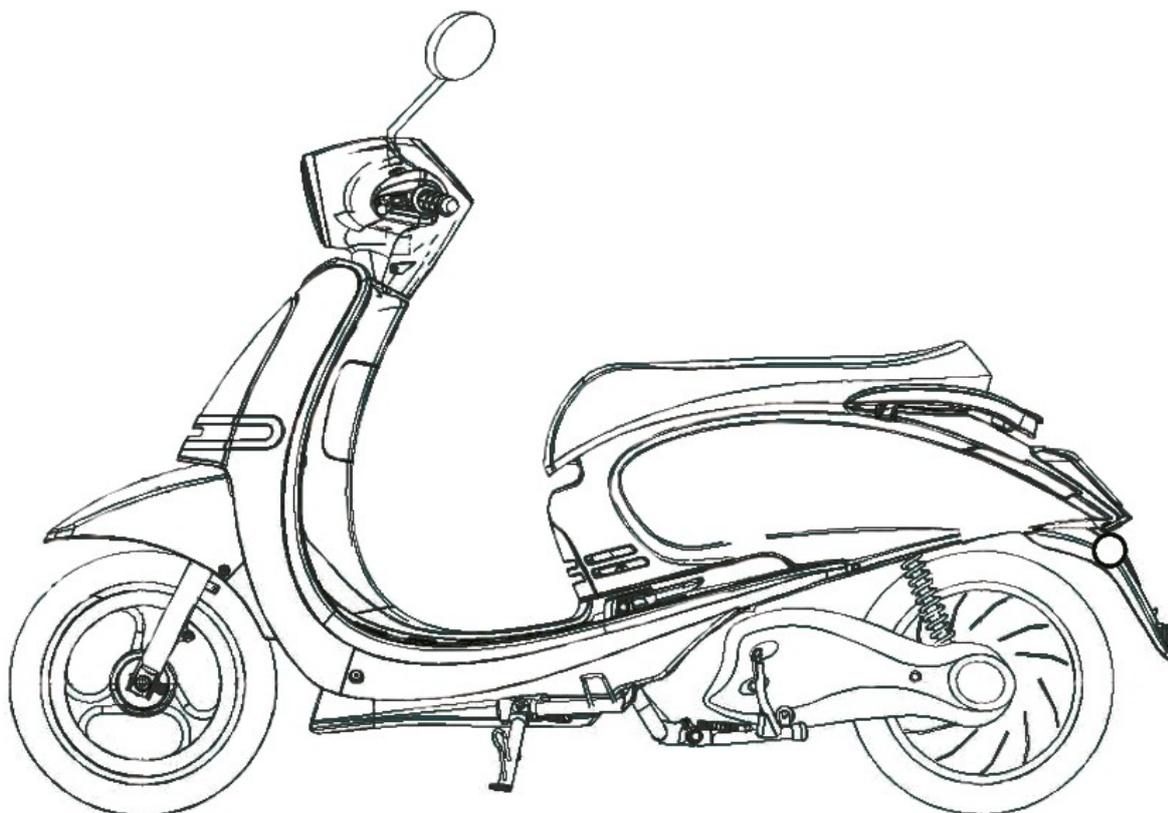

Especialistas en movilidad eléctrica



**ELECTRIC
MOTORCYCLES**

Workshop Manual



PUSA 45/90

INTRODUCTION:

This manual shows a specific operation: *"How to charge the removable battery of a PUSA 45 or PUSA90"*.

It is recommended the complete reading and to provide yourself with all the tools and outfit before do any operation.

In case of do not know how to keep going on any operation, please contact with our expert in Efun Vehicle's Electronic.

Álvaro Satué Crespo

Tlf: 618 167 468 / 954 229 311

Especialistas en movilidad eléctrica



**ELECTRIC
MOTORCYCLES**




1. To access to the battery, it will be necessary put the key inside the start lock.



2. Once you have introduced the key, you should turn left to unlock the seat.



3. Lift up the seat to Access to the battery connections.

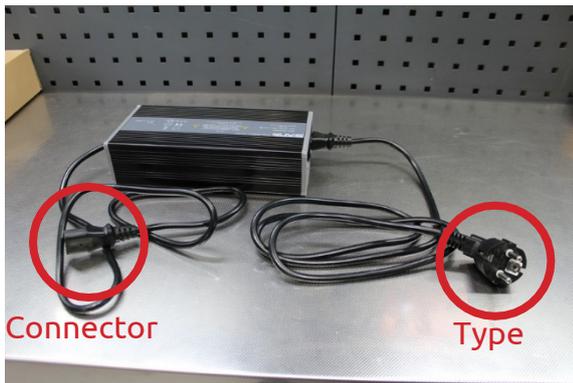

4. Prepare the charger to charge the battery.

The charger has two connections:

1. Plug type F or Schuko to connect into the wall.
2. Connector IEC C13 to connect to the battery.



5. Connect the plug type F to the plug in the wall.



6. Check out that the LED is On with GREEN light.



7. Connect the IEC C13 connector from the charger to the battery, we need to lift the top that cover the connection in the battery.



8. Wait a few seconds and check out that the LED indicator of the charger is on with RED light.

If the LED will not change and will stay in Green, that means that the battery is charged to 100%.

WARNING:

DO NOT CONNECT THE BATTERY DIRECTLY INTO THE CURRENT WITHOUT USING THE ORIGINAL CHARGE.

In case of do not charge the battery following these instructions and, damaging it, **the warranty is not applicable.**

